




FABRIC DUCT

AIR DISTRIBUTION SYSTEM

INSTALLATION INSTRUCTIONS

1. Choose two walls or ceiling mounting points that are at least 15 feet across from each other. Screw the **Open Eye Bolts** into the studs/joists.
2. Cut the **Mounting Cable** to desired length. Leave at least 8" of cable left over to allow for **U-Lock Nut** mounting and tensioning.
3. Using one side as an example, mount the **U-Lock Nut** to the other side of the cable.
4. Connect the **Tensioner** to the **Open Eye Bolts**, then connect the **Mounting Cable**. Repeat this process for both sides. To tighten the cable, turn the **Tensioner** in a counter-clockwise direction.
5. With the **Mounting Cable** now tight, connect it to the Fabric Duct using the integrated **Clips** found on top of the Fabric Duct. The open end should be towards the Indoor Air Handler.
6. Mount the open end of the Fabric Duct to the **Top Plenum** of the Indoor Air Handler. Using the supplied **Mounting Strap**, tighten the Fabric Duct to the collar of the **Top Plenum**.

We recommend creating an **Additional Mounting Point** every 10 feet to stop the Fabric Duct from sagging. This can be done by screwing an extra **Open Eye Bolt** into the ceiling and implementing an additional Drop Cable (using the extra **U-Lock Nuts** and leftover **Mounting Cable**), which will connect to the existing **Mounting Cable**.

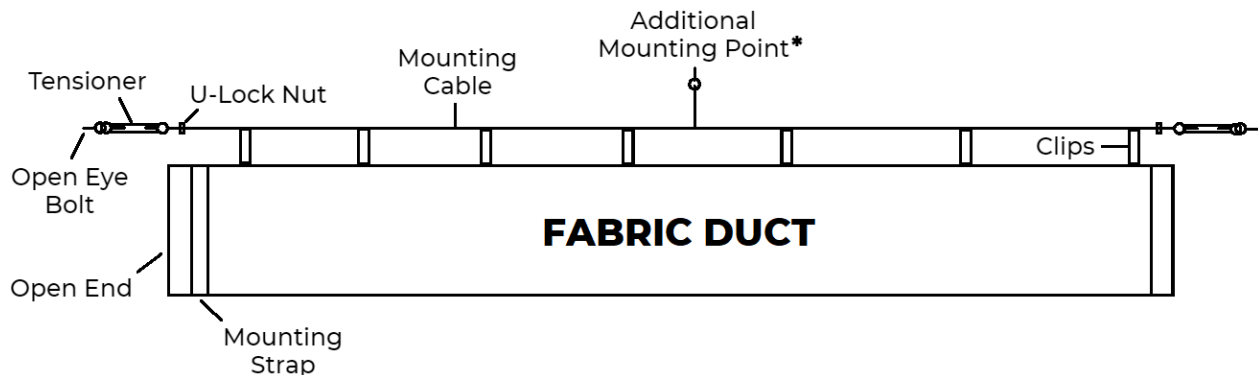

* Recommended tension point at 10 feet.

For more information, please visit:

www.excelairsystems.com/excel-fabric-duct