




HANGING KIT

INSTALLATION INSTRUCTIONS

1. Attach **Hanger Bolt** to ceiling or joists that the Indoor Air Handler unit will hang from. Tighten **Hanger Bolt** until securely fastened.
2. Take threaded **Ready Rod** and fasten a single **Nut**, 1" down the **Ready Rod**. Fasten the **Ready Rod** into the **Hanger Bolt** and sufficiently hand-tighten.
3. Using two small wrenches, tighten both the **Nut** and **Hanger Bolt** together.



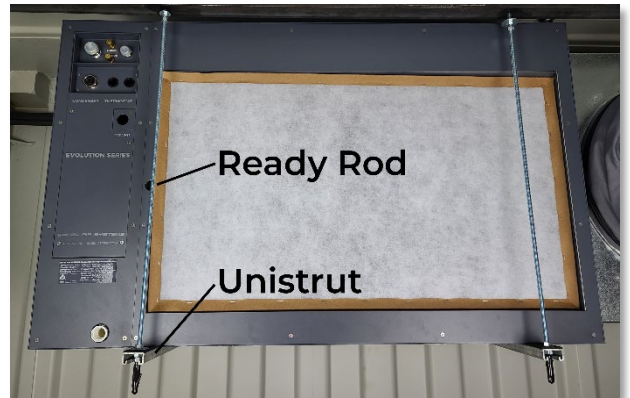


Repeat Steps 1 through 3 for all four lengths of **Ready Rod**.

4. Attach one **Nut** to the opposite end of the **Hanger Bolt**, 1" from the bottom of the **Ready Rod**.
5. Place one **Washer** snugly against the **Nut**, followed by the **Unistrut** bar, then another **Washer**, and then, finally, another **Nut**.

Repeat Steps 4 and 5 for the opposite end of the **Unistrut**, which will then create a large U-Bracket.

Repeat entire process to assemble the other U-Bracket. Rest Indoor Air Handler on Hanging Kit. Installation is now complete.

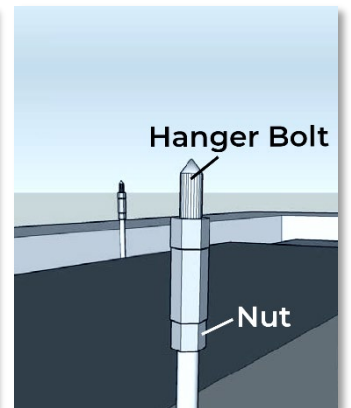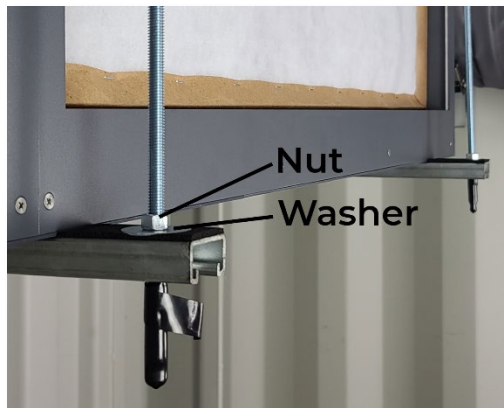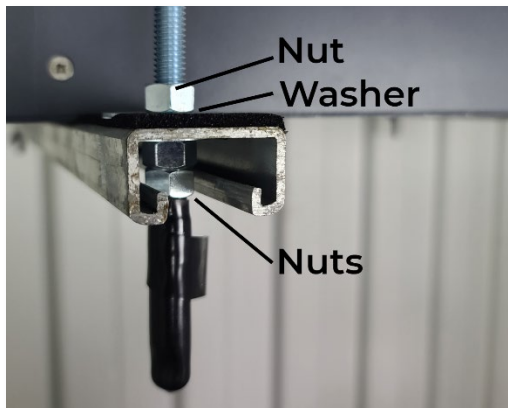

For more information, please visit:
www.excelairsystems.com/hanging-kit