





UV AIR PURIFIER

INSTALLATION INSTRUCTIONS

FOR THE XL SERIES

1. Turn off power to the **Indoor Air Handler** and remove the front panel.
2. Connect the **UV-C Bulb** to the **Z Magnet** base holder using the supplied nuts (included in the small bag).
3. Carefully attach the **Z Magnet** to the underside of the **Top Control Panel**.
The **UV-C Bulb** should be pointing down towards the bottom of the unit, in between the left side wall of the **Indoor Air Handler** and the **Blower Fan**.
Be careful to ensure that the **UV-C Bulb** does not make contact with any metal.
4. Remove the **UV Ballast** from its packaging and connect the **Black Wire** to the **U Terminal** and the **Red Wire** to the **V Terminal** on the **Indoor Air Handler**.
5. Mount the **UV Ballast** using the supplied metal screws and connect the **Blue Wires** by lining them up with the specialty connector and pushing them together.
Make sure that the **Wires** do not come in contact with the **Blower Fan** by leaving the remainder inside the **Control Panel**.
6. Turn on system power and begin utilizing DNA sterilization and photo-oxidation to disinfect the air, killing mold, bacteria, and viruses whenever the **Blower Fan** is operating.

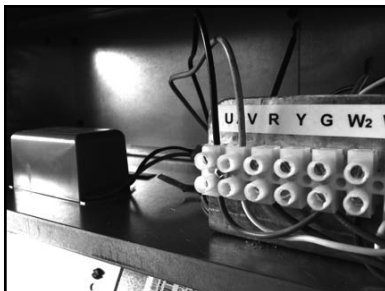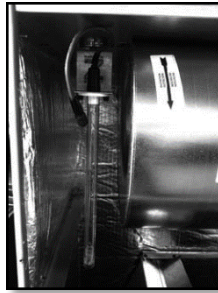

For more information, please visit:
www.excelairsystems.com/uv-purification